

3 QUICK & EASY STEPS




1. DRILL HOLE WITH SAME DIAMETER AS NYLON ANCHOR (3/8" or 1/4"), BUT SLIGHTLY DEEPER THAN LENGTH OF ANCHOR.

(NOTE: FOR MASONRY, USE PROPER DRILL BIT.)




2. INSERT NYLON ANCHOR THROUGH OBJECT TO BE FASTENED AND INTO DRILL HOLE.



3. USING HAMMER, DRIVE EXPANDER PIN FLUSH WITH HEAD OF ANCHOR. NYLON ANCHOR EXPANDS AND IS PERMANENTLY ANCHORED.

(YOU CAN REMOVE EXPANDER PIN, RE-THREAD ANCHOR, AND RE-USE.)

SUGGESTED PLACARD MOUNTING LOCATIONS

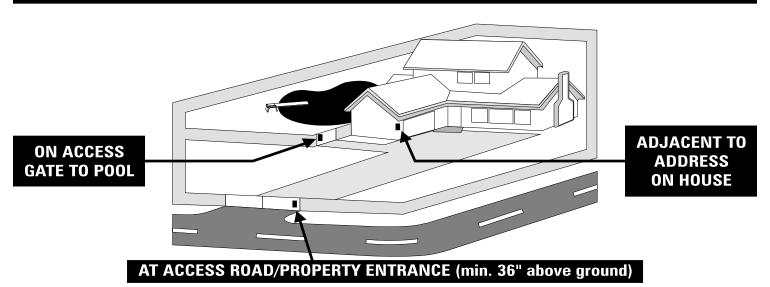

All Access Roads/Property Entrances must be placarded.

Contact your local fire department for guidance or any additional information.